



Control4® Touch Screens Quick Reference

Control your home from your touch screens

Welcome to the exciting world of home automation. Your Control4® 5" or 7" In-Wall Touch Screens or 7" Portable Touch Screen with Camera control everything in your Control4 home automation system. Turn on your TV in the Great Room from your Kitchen while you're cooking dinner. Lock all the doors at night before you go to bed from the touch screen on your nightstand. Carry your portable touch screen with you as you walk through your house. Wake up in the morning to your favorite song. Total control is easier than ever to use with just a few taps on the screen.

Getting started

Tap to wake up the touch screen. Start controlling your system.



Change rooms before controlling your devices

The current room's name appears in the top part of your touch screen.

To control a device, you'll need to change to the room the device is in.

If your touch screen shows that it's not in the room you want, just change rooms.

To select a room:


- 1 Tap the room name at the top of the screen like Family Room (right).
- 2 Tap **House > Floor**, then in the right pane tap the **room**. A star appears next to the room you can set as the default, so the Kitchen (shown right) has a star next to it in this screen.
- 3 Notice that the room name changes according to what you've chosen. Tap the device you want to control in that room.





Using the touch screens


Tap the touch screen to access the Home menu and your system.


- 1 Select the room you want, and then tap an icon (see below). This varies, depending on what's installed and which room you are in.
- 2 Tap what you want to control in the room:


 Watch cable, satellite, or movies on your TV or projector.


 Manage one or all lights and scenes.

 Listen to the radio, music, Rhapsody®, and more.

 Change settings, remote service, and more.

 Manage security cameras, door locks, and more.

 Use 4Store apps to enhance your system, manage your smart locks, and more.

 Manage thermostats, blinds, and more.

Helpful tips

Room off. Tap the **power** button (see below) to turn off audio or video.

Listen

- When you choose **Listen**, you won't see any activity on the TV, but you can listen to Cable, Dish Network music channels, radio stations, and more.
- Access music stored on the network using **Listen > My Music**.
- Music services such as Rhapsody, Pandora, and TuneIn display under **Listen**.
- Radio stations display under **Listen > Stations** (depending on your reception and what you've set up).

Volume. To control audio in the selected room, use these buttons in the media bar at the bottom of the screen to change the volume, mute the music, power off, and more.



A **Currently Playing**—Lists the song currently playing.

B **Back**—Skips the song back.

C **Pause/Play**—Pauses or plays the song.

D **Forward**—Advances the song.

E **Mute**—Mutes the song.

F **Volume Controls**—Increases or decreases the volume by percentage.

G **Power**—Powers off what is currently playing.


H **Zones**—Enable or disable media zones.

Media Zones

To listen to audio in one or more rooms, you use the zones icon. Add or remove zones by room. For example, to play music in the Theater, just add that room (zone). To listen to your favorite podcast in the Kitchen, select and add that room.

Tap the **zones** icon to open the Add Rooms screen. Rooms are listed on the left by **All Rooms**, **floor**, and **room** (shown right). Select the **room** to play audio in the room or to stop playing audio in the room.

Watch

- If your dealer sets up favorites  you'll see a Channels icon.
- If you have a media player, you'll see a Movies icon.

 
Comfort

Thermostats appear in all rooms. You don't need to change rooms to manage your thermostats.

Lights

This lists all of the installed Control4 lighting devices in your home; for example, keypads, dimmers, switches, or *lighting scenes* in the whole house or in individual rooms. Lighting scenes are preprogrammed sets of lights you can control by room or activity.

- **Dimmers.** Shows as slider bars where you can set light levels and intensity. Just select, hold, and slide.
- **Light Switches.** Shows as on/off toggles with no dimmer control. Just tap **On** or **Off**.
- **Lighting Scenes.** Shows as a list of created scenes with specific names. Create, remove, or edit lighting scenes yourself.
 - **All.** Shows all lights and lighting scenes in the house or selected room.
 - **By room.** Shows the lights in a specific room. In the example above, all lighting devices in that room (Entry Way) are shown.
 - **Lighting scenes.** Shows just the lighting scenes you or your dealer have created.

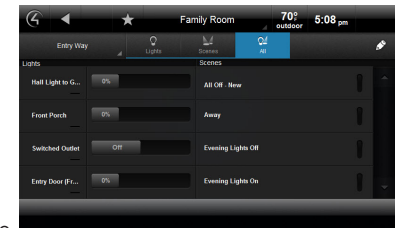

Recommended Control4 products

- **Control4 app and 4Sight Service with Anywhere Access.** With the Control4 app and 4Sight, control your home on your Apple or Android smartphones or tablets...or even your PC, whenever you're away from home or vacationing abroad. Note: With OS 2.6, the 'MyHome' title has changed to 'Control4 App.' You cannot use 'MyHome' in OS 2.6 or later.