

# Control4 Mini Remote

## User Guide



### Introduction

The Control4® Mini Remote provides homeowners with an easy-to-carry, simple-to-use, five button remote for their Control4 system. Small, battery-powered and water-resistant, the Mini Remote fits on your keychain, clips to a car's sun visor, sits on a coffee table or nightstand, or easily fits in your pocket or purse. The Mini Remote has five programmable buttons that can be customized for any Control4 task.

The Mini Remote extends Control4 accessibility with a simple, pocket-sized remote, making it ideal for performing many common functions in and around your home, including:

- A garage / home entry remote (as a garage door toggle, an entry gate control, arriving home button, leaving home button, and outdoor lighting remote)
- A simplified audio or even TV remote (with on/off, skip forward, skip back, volume up, volume down controls)
- A personal "panic button" for the elderly (to create "call-for-help" events and/or send e-mail help requests to family members)

Ask your Control4 installer about more uses for the Mini Remote!

The Mini Remote uses an integrated Light Emitting Diode (LED) located near the top of the remote to provide you with feedback, while a "hold" switch prevents accidental key presses in a pocket or purse.

### Using your Mini Remote



### Buttons

The Mini Remote can be programmed to execute an event or function by either pressing the button for less than 1/2 second or holding the button for more than 1/2 second. Your Control4 installer can program different events for a button press versus a button hold. On a button press, the LED blinks on then off as you press and release the button. On a button hold, the LED will turn on and then blink for the duration of the hold. This feature is useful for functions such as dimming lights and volume control. If the button is pressed for longer than 30 seconds, the LED will stop blinking as a power-saving measure.

### LED

The default LED color is blue. To customize your LED color, contact your Control4 installer. This option may be helpful if you have multiple Mini Remotes in your home or office.

The LED will flash to indicate a low battery. When battery power is reduced to 10% or less, the LED will blink yellow after each button push. When the battery power is reduced to 5% or less, the LED will blink red after each button push.

### Hold slide switch

The Mini Remote uses a slide switch to disable buttons and prevent accidental button pushes. If you want to disable the buttons while the Mini Remote is in your purse or pocket, slide the hold switch in (to the right), making the buttons inactive and preventing accidental event execution. To activate the buttons, slide the hold switch out (to the left).

### Lanyard ring

The Mini Remote lanyard threads through the lanyard ring of the Mini Remote, located on the remote bottom, and attaches to your key ring.

## Maintenance

### Battery installation

The Mini Remote is designed to maximize the life of your batteries, though actual battery life will depend on usage and environment. The Mini Remote also includes LED indicators for low battery levels. When your Mini Remote LED blinks yellow or red twice after a button push, your batteries are low and it's time for you to replace them. In the event the LED remains red and the buttons cease to respond, the batteries do not have sufficient power for the remote to operate.



Left battery: positive (+) down  
Right battery: positive (+) up

- 1 Remove the end cap by pulling outward.
- 2 Remove the screw.
- 3 Open the case.
- 4 Replace the batteries.

Polarities (+ and -) are marked on the center divider.

### Battery optimization and safety

- Keep the battery contacts and the compartment clean and dry.
- Remove batteries if the remote is not expected to be used for a long period of time.
- Avoid extreme temperatures, as they reduce battery performance.
- Use only AAA alkaline or lithium batteries.
- Never dispose of a battery in a fire.

## Regulatory/Safety information

To review regulatory information for your particular Control4 products, see the information located on the Control4 website at [ctrl4.co/reg](http://ctrl4.co/reg).

## Warranty

Visit [ctrl4.co/warranty](http://ctrl4.co/warranty) for details.

## Support

Contact your Control4 Installer for support questions.

Control4 Installer Name:

Control4 Installer Phone:

Control4 Installer Email:

Remote name:

LED color:



Notes:

Remote name:

LED color:



Notes: