



# Control4® SR-250 Quick Reference

## What do you want to control?

Welcome to the exciting world of home automation and the SR-250, a remote that controls far more than your TV—everything in your Control4® home automation system. Turn on the lights in your kitchen from the bedroom. Lower the shades with a touch of a button. Make sure the doors are locked. The SR-250 keeps you in control of your Control4 system and your home with one powerful, yet easy-to-use, remote.

## Getting started

The SR-250 provides three different ways to manage your system.

### Option 1: Display screen menu

Use your remote's display screen to interact with your system. Press the **LIST** and **SELECT** buttons of what you want to access. Use the arrows to adjust the thermostat settings, manage lights, watch TV, listen to music, and more.




### Option 2: TV on-screen menu

Use your remote's **4** button to access the Home menu on your TV. Then use the arrow and **SELECT** buttons to interact with your system.




### Option 3: WATCH/LISTEN buttons

The **WATCH** and **LISTEN** buttons are shortcuts to your video and audio components. Press **WATCH**, for example, and your TV, DVD player, or AppleTV box will appear on the display screen. Use the arrows and **SELECT** buttons to choose what you want to access.

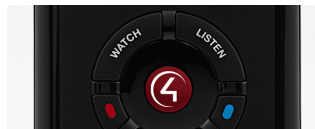

The next page shows you how to use these options.

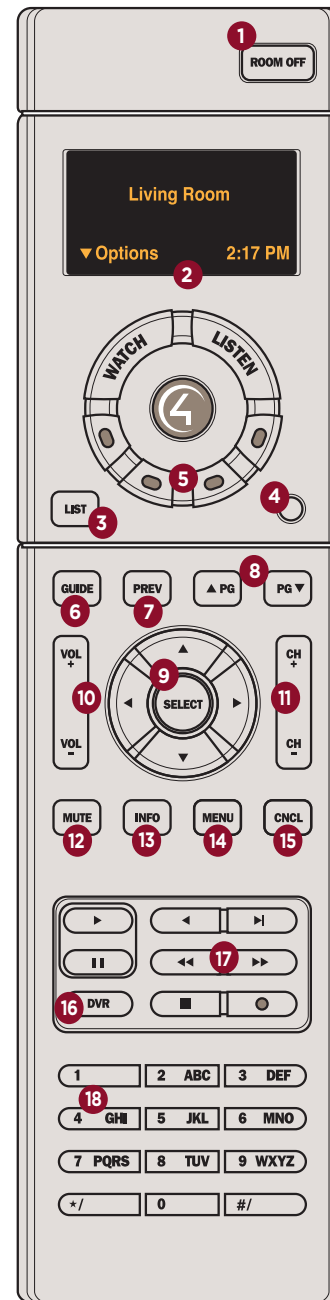


- 1 Off button**  
Turns off devices in room
- 2 Display screen**
- 3 LIST button**  
Displays system's list in display screen
- 4 Ambient light sensor**  
Enables backlight on buttons
- 5 Programmable buttons**   
Can be programmed to shortcut various remote functions
- 6 GUIDE button**  
Displays television program listings
- 7 PREV button**  
Return to previous channel or screen
- 8 PG▲ PG▼**  
Scrolls pages up and down
- 9 SELECT button**  
Selects desired option  
Scroll up/down ▲▼ Scroll left/right ◀▶
- 10 VOL button**  
Controls device volume
- 11 CH button**  
Scrolls up and down through television channels
- 12 MUTE button**  
Turns off device sound
- 13 INFO button**  
Program information
- 14 MENU button**  
Access device features and settings
- 15 CNCL button**  
Cancels last action
- 16 DVR button**
- 17 Playback control buttons**  
 Skip back Skip forward Play  
 Rewind Fast forward Pause  
 Stop Record
- 18 Alphanumeric buttons**  
Enter letters or numbers to change channels, set light levels, or enter text

## Using the remote

### Change rooms before controlling your devices

If your remote shows that it's not in the room you want, change to where the device is located. The current room's name appears in the display screen.


- 1 Press the **LIST** button.
- 2 Select **House > Location > Floor > Room**.
- 3 Select what you want to control.

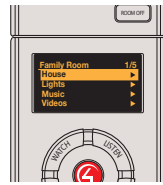

### Option 1: Display screen menu

Use the arrows and **SELECT** buttons to control the system from the remote. In this example, we'll show you how to access climate and lighting controls.



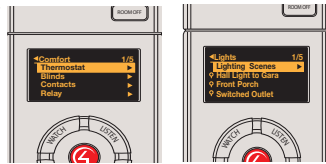




- 1 Press the **LIST** button.
- 2 Change to the room where the climate controls or lights are that you want to control.
- 3 Use the remote's display screen and buttons to choose **Comfort** or **Lights**.
- 4 Change your lights, thermostat, pool and spa, and more.



### Option 2: TV on-screen menu

Use the red **4** button to control your system with the TV on-screen menu.

- 1 Change to the desired room using your remote's display screen.
- 2 Press the **4** button on your remote. The Home screen appears on your TV.
- 3 Use the arrows and **SELECT** buttons to choose an icon:

	Watch cable, satellite, or movies on your TV or projector.		Manage one or all lights and scenes.
	Listen to the radio, music, Rhapsody®, and more.		Change settings, remote service, and more.
	Manage security cameras, door locks, and more.		Use 4Store apps to enhance your system, manage your smart locks, and more.
	Manage thermostats, blinds, and more.		

### Option 3: WATCH and LISTEN buttons


Use the **WATCH** or **LISTEN** buttons to watch TV, play the radio, and more.

- 1 Change to the desired room on your remote.
- 2 Press **Watch** or **Listen** on your remote for available devices in the list. Use the arrows and **SELECT** buttons to control audio or video.



## Helpful tips

- **To turn off what you're watching or listening to.** Press the **ROOM OFF** button.
- **To choose a language for the remote's screen**  
Press **LIST**, then select **Info > Config > Language**. Select the language (the default is English).
- **To check battery level**  
Press **LIST**, then select **Info > Config > Battery Level**.
- **To display remote brightness**  
Press **LIST**, then select **Info > Config > Display Brightness**.
- **To display remote keypad brightness**  
Press **LIST**, then select **Info > Config > Keypad Brightness**.
- **To turn on keypad backlight**  
Press **LIST**, then select **Info > Config > Light Sensor**. Select **On** or **Off**.
- **To wake up the remote or change wakeup settings**  
Press **LIST**, then select **Info > Config > Motion Detect**.  
Select **Off**, **High**, **Medium**, or **Low**.
- **To restore the remote's factory defaults**  
Press **LIST**, then select **Info > Config > Factory Defaults**.  
Select **Cancel** or **Off**.
- **To view the remote's network address**  
Press **LIST**, then select **Info > Config > About**. This displays the unique address for the remote. Your dealer may need this information for servicing.
- **Programmable buttons.** Have your dealer program the four colored buttons (red, green, yellow, blue) to improve your lifestyle.
- **To replace the battery**  
When it's time to replace the batteries, a message will appear on the display screen. Remove and install two new AA batteries into the back of the SR-250. Insert them according to the diagram in the battery compartment.

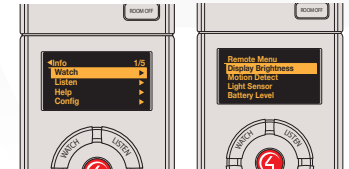

## Recommended Control4 products

- **Remote Recharging Station.** Keeps your remote charged all the time.
- **MyHome app and 4Sight Service.** With MyHome and 4Sight, control your home on your Apple or Android smartphones or tablets...or even your PC, whenever you're away from home or vacationing abroad. **Note:** With OS 2.6, the name 'MyHome' has been replaced with 'Control4 App.' See the Control4 App documents for details.